

**IntelliCon®-AC**

## RESIDENTIAL AIR CONDITIONING ENERGY ECONOMIZER

**Description**

The IntelliCon®-AC is a patented microprocessor-based energy-saving device for residential air conditioning systems. The IntelliCon®-AC reduces electric consumption and lowers compressor run-time by actively managing the compressor cycling pattern, in conjunction with the existing compressor controls. Note that the IntelliCon® will not cause the compressor to run when the controls are not calling for cooling. The IntelliCon®-AC enhances compressor protection by eliminating compressor short-cycling. This unit is compatible with Intellidyne's Remote Display Unit (model RDU). In addition to Status, the RDU will also indicate total compressor run-time and economizer time.

**This is a residential air-conditioning control and should not be installed in a commercial / industrial application. The installation of this control in a non-residential application may result in unacceptable temperature fluctuations during times of heavy cooling demand and will void the Savings Guarantee.**

**Electric Ratings**

Power input: 24,115,220 VAC ± 10%, 5 Watts max., 50/60Hz  
Control circuit input: 24,115,220 VAC ± 10%, 0.1A max. Burden  
Relay Contact: Form B, 10A @ 220 VAC (General Purpose)

**Environmental Conditions**

For Indoor Use.

Maximum Altitude: 6500 Ft. (2000M)  
Rated Ambient Temperature: -20° -- 120°F. (-29° -- 49°C.)  
Maximum Rh: 80% non-condensing  
Mains Supply Voltage Fluctuations: ± 10%  
Transient Over-Voltage Category: (III)  
Pollution Degree: (2)

**Note: The IntelliCon control must be operated within the specifications and protected from the elements. Failure to do so voids the warranty and guarantee.**

**Operation**

After installation, setting the switch on the unit to the 'ON' position activates the device. The lights on the front panel indicate the state of operation of the device and will sequence as the device goes through its operating cycle. Each light indicates one of the possible modes of operation, which are:

**STANDBY MODE:** The central air conditioning unit's thermostat has shut off the compressor after cooling the space to the desired temperature. The IntelliCon® is waiting for the next call for the compressor to start. This occurs for a period of time after the compressor has shut down.

**ECONOMIZING:** The central air conditioning unit's compressor thermostat has requested the compressor to start but the IntelliCon® has intervened to delay the start based on information it has gathered from the previous run cycle.

**COMPRESSOR ON:** The compressor is enabled.

**ANTI-SHORT-CYCLE:** This is an added compressor protection feature of the device that ensures at least a three-minute delay between compressor starts. This light will illuminate whenever the compressor has been turned off and will remain on for the three- minute protection period. The compressor can not be enabled while this light is lit.

*During normal operation, the top three lights will cycle from one state to the next and the anti-short-cycle light will come on for three (3) minutes whenever the compressor shuts off.*

**Installation**

The IntelliCon®-AC is electrically installed in series with the air conditioning unit's thermostat as shown in the wiring diagrams on the reverse side. Check and determine the voltages of the compressor control circuit and power circuit prior to installation.

**FOR SAFETY, POWER TO THE UNIT MUST BE DISCONNECTED DURING INSTALLATION.**

**Positioning**

The unit must be protected from the elements and may be mounted on the equipment either vertically or horizontally. The unit should be mounted directly on the existing electric enclosure via the unit's standard ½" electrical fitting or within the enclosure

using an accessory mounting bracket. For mounting in the elements, a rain-tight mounting enclosure is available.

**Wiring**

**All wiring and connections must comply with Local and National Electrical Codes. The unit should be wired as shown in the wiring diagrams on the reverse side. It is important to read all of the instructions and the NOTE on the other side of these instructions. Ensure that POWER TO THE UNIT IS OFF DURING INSTALLATION and that all unused leads are individually insulated.**

**Checkout**

Recheck wiring one last time. Set the IntelliCon® switch to 'Off/Bypass' and restore power to the system. Set the switch to 'On'. First, as part of the system check, all four (4) lights on the IntelliCon®-AC will be briefly lit and then go out. Next, either the 'STANDBY MODE', or the 'ECONOMIZING' light will activate depending upon the operating state of the central air conditioning unit controls, and the 'ANTI-SHORT-CYCLE' light will come on and remain on for three minutes. This is normal during power-up. After the three-minute interval, the 'ANTI-SHORT-CYCLE' light will go out. Next, if the 'ECONOMIZER' light is lit, after a short delay the 'COMPRESSOR ON' light will light and the compressor should start. If this happens the installation is complete.

If the IntelliCon®-AC remains in the 'STANDBY MODE' after the 'ANTI-SHORT-CYCLE' light goes out, it will be necessary to simulate a cooling call to verify proper operation. Note the thermostat and force a compressor call by temporarily lowering the temperature setting. Verify that the IntelliCon® has changed modes to either 'ECONOMIZING' or 'COMPRESSOR ON'. This indicates the unit is operating normally. *Make sure to return the thermostat to its previous setting.* If the IntelliCon® does not come out of 'STANDBY MODE' when the thermostat is calling for the compressor to run, the unit is probably wired incorrectly; see the WIRING NOTE below and check that the IntelliCon® Yellow wire is connected to the lead (Y) coming from the Thermostat.

**Service and Troubleshooting**

After Installation and Checkout, the IntelliCon®-AC requires no maintenance and will provide years of trouble free operation.

The unit may be bypassed at any time by putting the switch to the 'Off/Bypass' position. In this position, the unit has no effect on the system and the compressor will function as it did prior to the IntelliCon® installation. This allows service personnel to diagnose any problems without the IntelliCon® interfering.

**IMPORTANT - READ CAREFULLY**


- Failure to follow these instructions may result in damage to the system or cause a hazardous condition.**
- Installer must be experienced, qualified, and in certain locations, licensed to work on the system that this control is being installed on.**
- After installation is complete, follow the check-out procedure as provided in these instructions to confirm proper system operation.**
- Intellidyne is not responsible for improper installation or any damages that may result from improper installation.**
- Actual wiring may differ from that shown in the diagrams.**
- Equipment may have controls not shown.**
- Because the IntelliCon can operate with different voltages for the power and control circuits, it has separate common wires for these circuits. It is necessary that these wires are connected to the proper commons or the unit will not function properly. See the wiring diagrams on the reverse side of this sheet for details.**

**IMPROPER VOLTAGE SELECTION MAY DAMAGE THE UNIT AND VOID THE WARRANTY.**




**Typical Air-Handling Unit**

**24 Vac Power / Control**

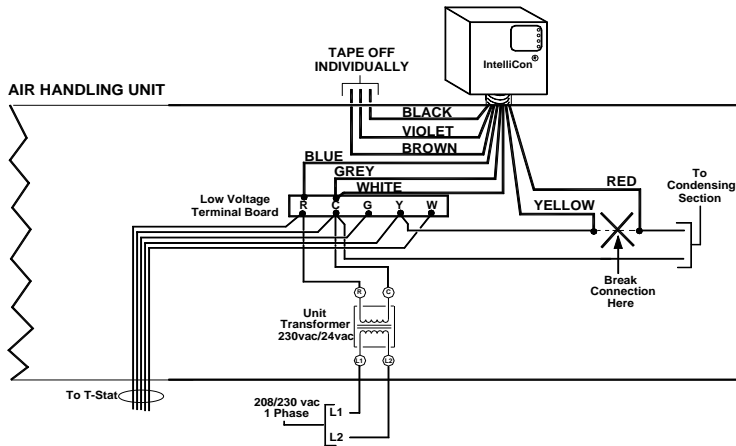


**208/220 Vac Power / 24 Vac Control**

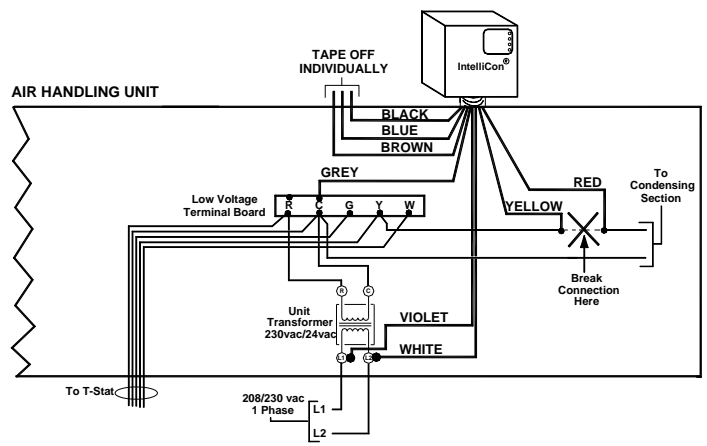

**NOTE:** Because the *IntelliCon* can operate with different voltages for the power and control circuits, it has separate common wires for these circuits. It is necessary that these wires are connected to the proper commons or the unit will not function properly. See the *wiring diagrams on this sheet for details*. These diagrams may not represent your particular installation.

**Typical Packaged Unit**

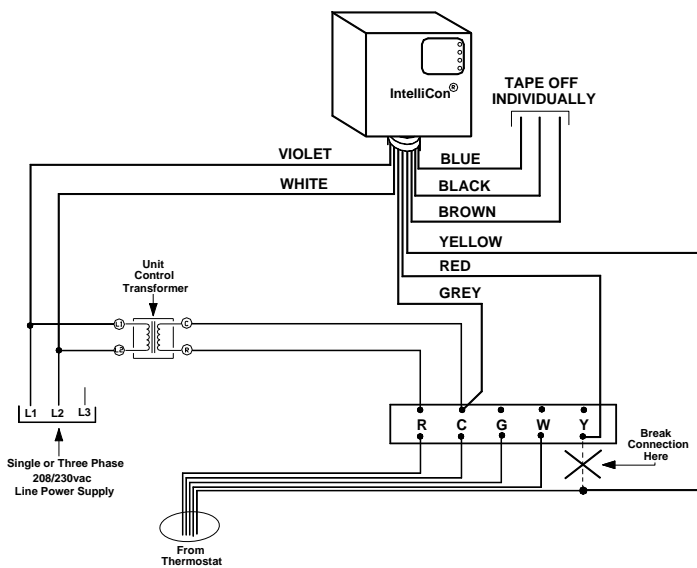

**Typical Split Unit Condenser Section**

